


Canopy is same length as dwg #41
Canopy bow & center spar are same.
Front canopy former should match
hull former as necessary

18-3/8" Note: Do
not raise
cabin above
18-3/8" This
is critical with
this aircraft.

Deck former is approx.
1" higher and 4.25" wider than
shown in Dwg #5

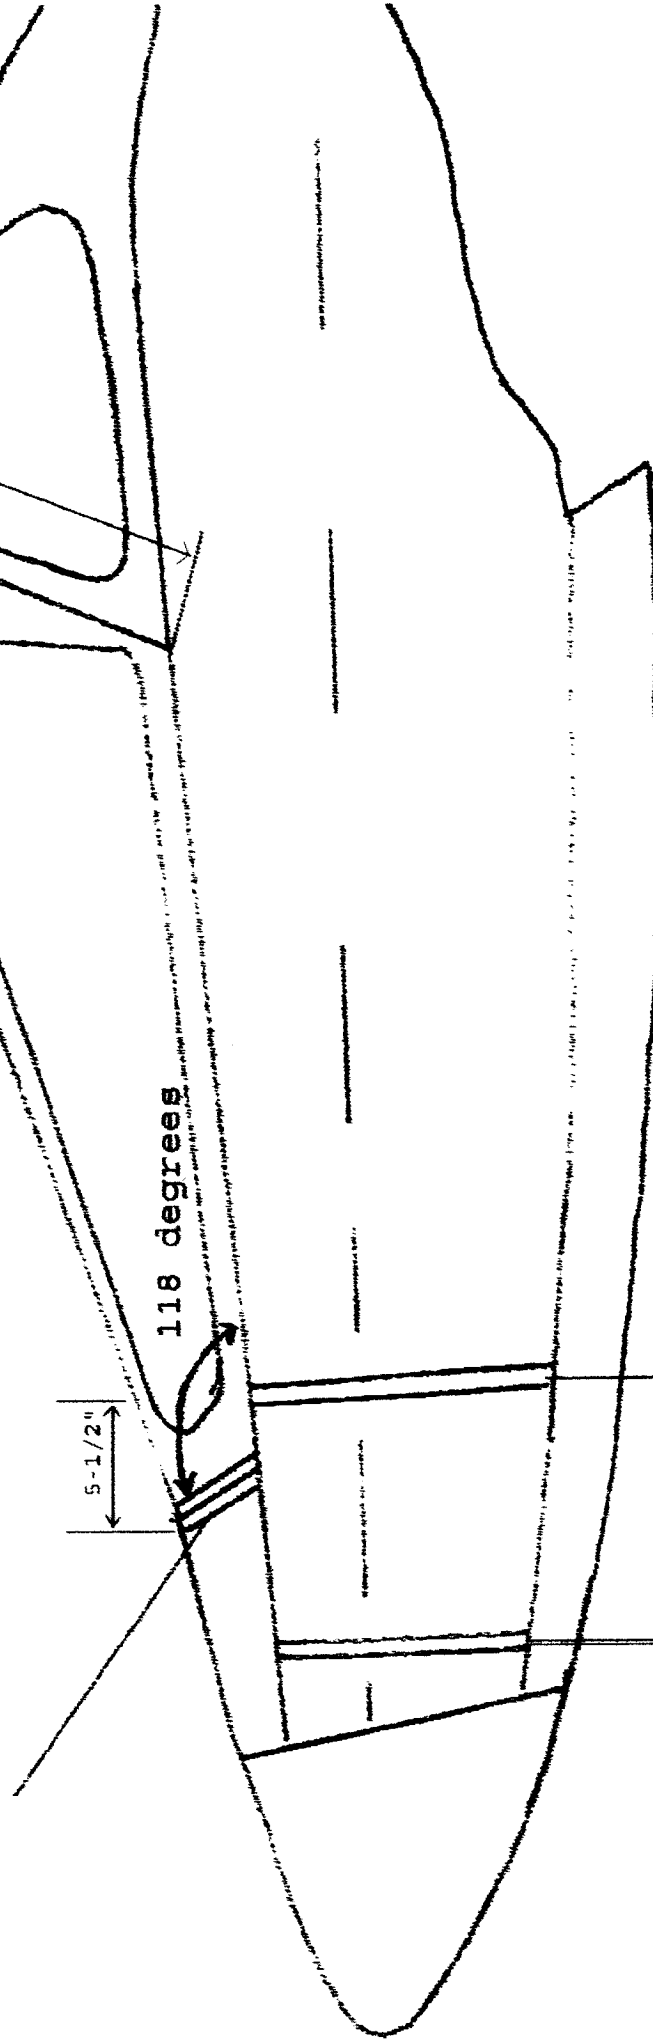

Osprey 2
Modification to hull
addition of 4" forward of step
Dwg #2A

Sta. 13

sta. 0