WINGTIP FLOATS - p. 34. The float is lacking in lateral strength, as in a skidding turn on the water. The float is tied to the spar only by the lower wing skin and the ¼" plywood spine glued to the wing rib. As shown below, build a small vertical spar with 1/2 x 3/4 spruce caps on 1/8" birth ply web, 4" wide, extending vertically thru the float and skin, glued to the rear web of the main spar. (Relocate the wing spar lightening hole if it is not yet made, or carry the 4" spar over it.)

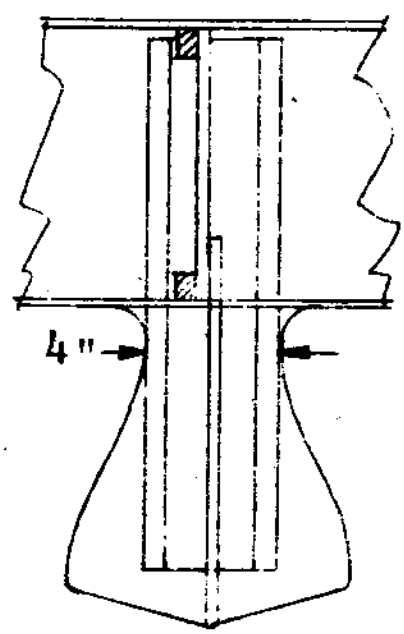

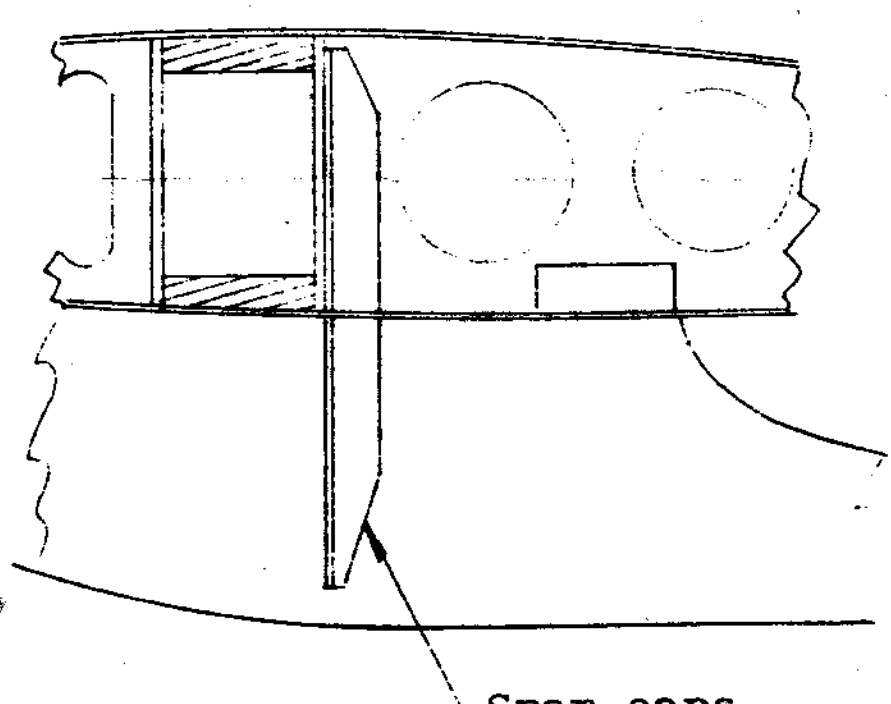

M.C. Winsor, Mont Vernon, NH 03057